


Fitting Instructions CSL-006

Fitting the Push Rivet:



- Drill the holes with a 5.5 to 6mm drill
- Fit the push rivet housing into the slider and ensure that it is fully seated.
- Push the slider hard against the swingarm until the push rivet housing is fully seated and there is no play.
- Using a rod of approximately the same diameter as the push rivet screw, insert it down into the push rivet housing to expand it lightly
- Fit the push rivet screw into position and push it in as far as you can by hand
- Lightly PUNCH the push rivet screw home – The push rivet can be unscrewed to remove but must be pushed home to install – NOT screwed in
- When fitting the titanium screws check the threads in the swingarm are serviceable and then do a mock fit of the screws without the slider.

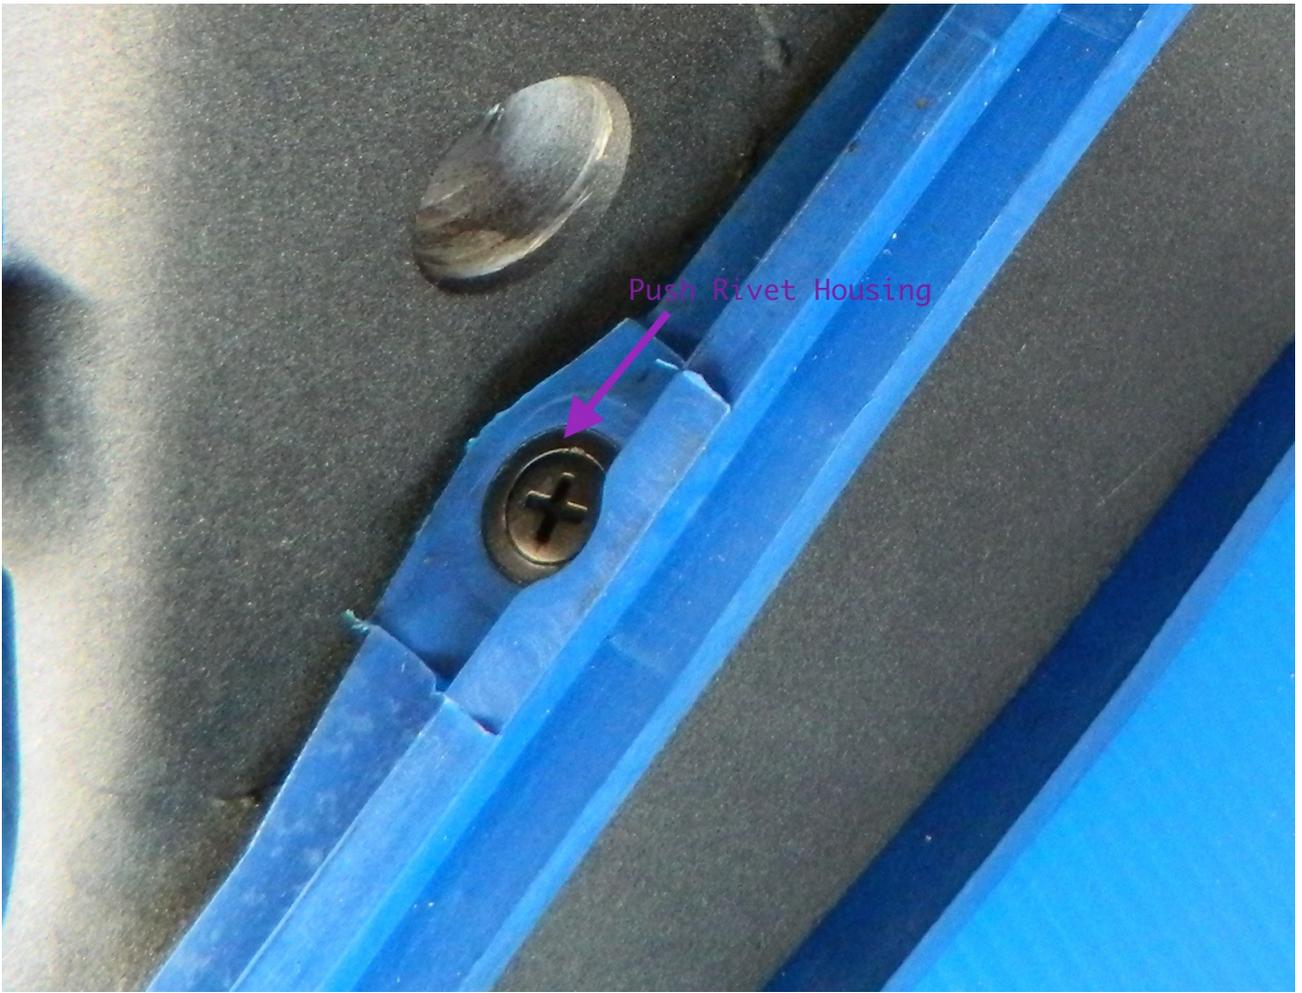

Push Rivet Housing